#skublox




Hardware Quick Start Guide


Q4 2020 Version 1.0.0

What's in the box

Before starting the installation, check that your box contains the following components:

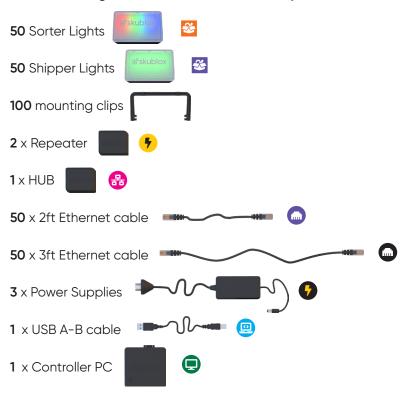


Configuration Front View

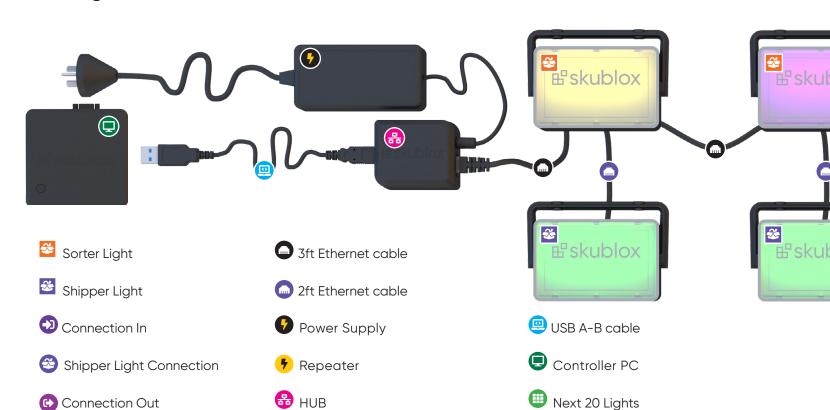



^{4 |} Skubox Hardware Quick Start Guide

Connection Out

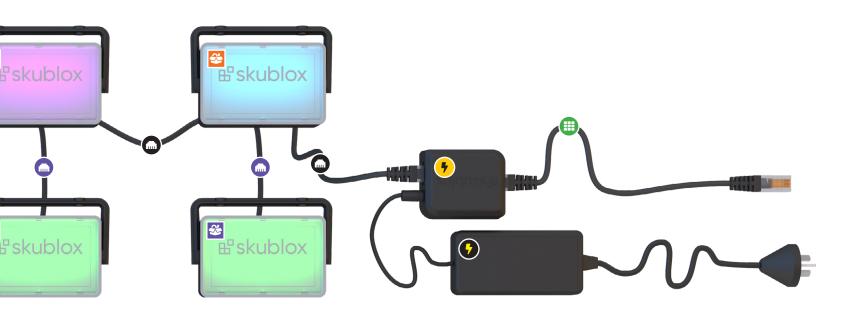


Configuration Rear View

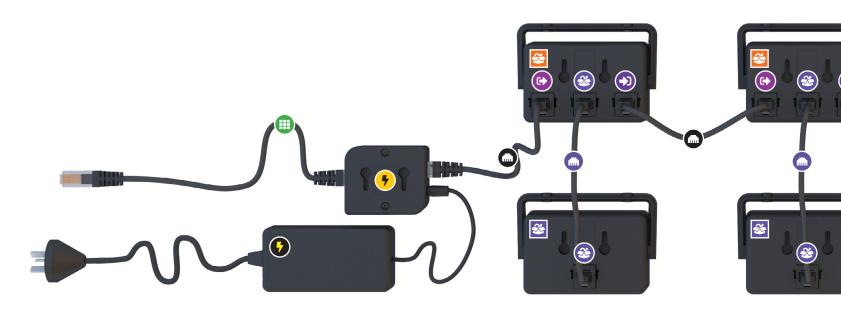


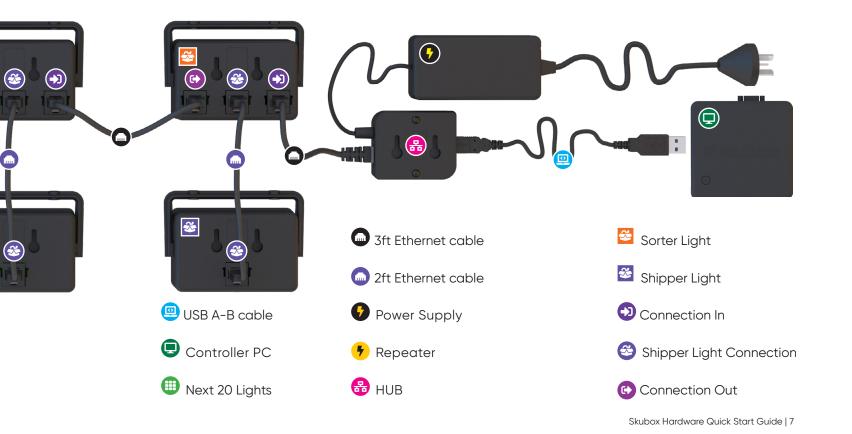

How to Connect the HUB


- Use the USB A-B cable (□) to connect the Hub (♣) with the Controller PC (□)
- 2. Connect the **Power Supply (*)** to the Hub
- 3. Use the **3ft Ethernet Cable ((m)**) to connect the Hub to the first Sorter Light in the configuration

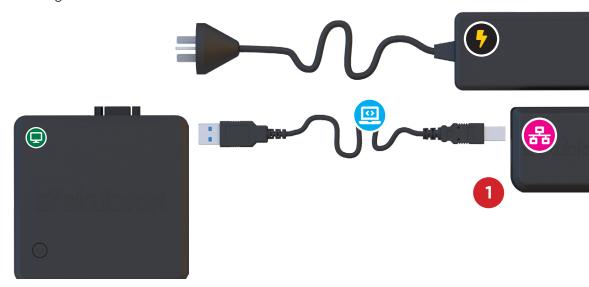

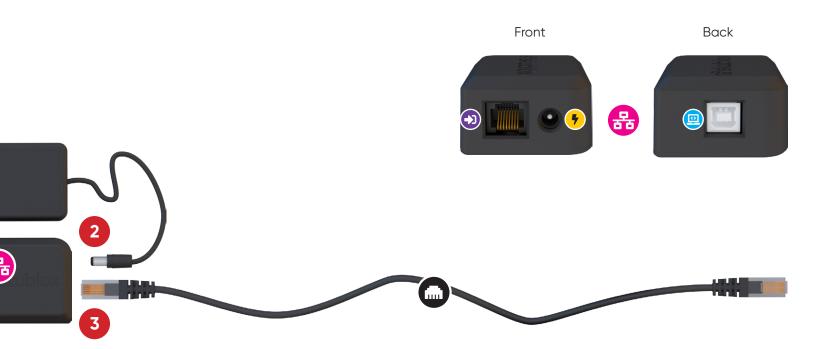


Connecting your Skublox wall

- Connect the Hub (♣) to the first Sorter Light (♣) with a
 3ft Ethernet Cable (♠) via the Connection In (♣) port
- Connect the Sorter Light (♣) to the Shipper Light (♣) by plugging a 2ft Ethernet Cable (♠) into the Shipper Light Connection (♣) (center) on the Sorter Light (♣) and the ethernet port on the Shipper Light (♣)

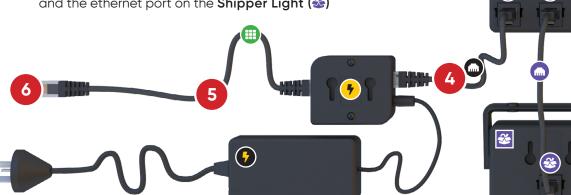

- Connect the Sorter Light (♣) Connection Out
 (♣) to the next Sorter Light (♣) Connection
 In(♣) port using the provided 3ft Ethernet Cable
- 4. Repeat steps 1 through 3 until your first 20
 Lights are connected. Next, connect the
 last Sorter Light (♣) Connection Out (♣)
 port to the next cluster of Lights via a
 Repeater (♣) and 3ft Ethernet Cable (♣)

≈

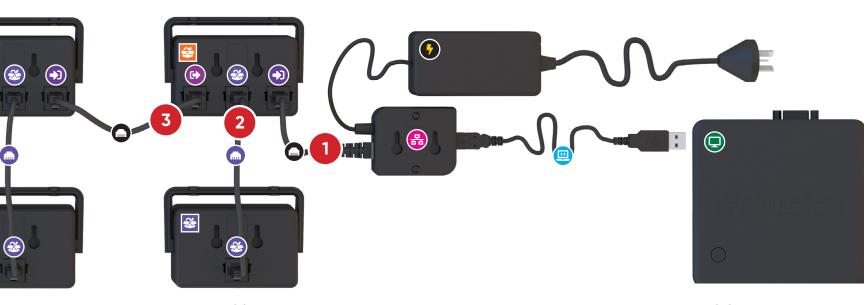


- 5. Use the **Power Supply (*)** to connect the **Repeater (*)** to the power source
- Connect the Repeater (→) to the next Sorter
 Light (ॐ) Connection In (→) port with
 a provided 3ft Ethernet Cable (♠)


Repeat these steps for the Next 20 Lights (:::).

How to Connect a Repeater

- Use the provided 3ft Ethernet Cable (m) to connect the Repeater (*) with the Connection Out(*) port on the previous Sorter Light (*)
- Use a 3ft Ethernet Cable (♠) to connect the Sorter Light (♣) Connection Out(♠) port to the Next Sorter Light (♣) Connection In(♠) port
- 3. Connect the **Power Supply (*)** to the **Repeater (*)**

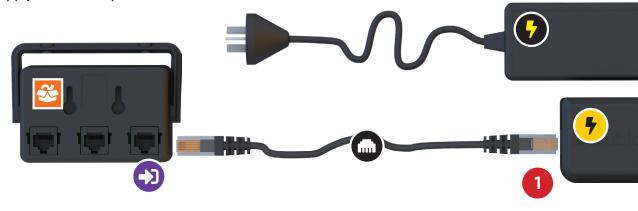



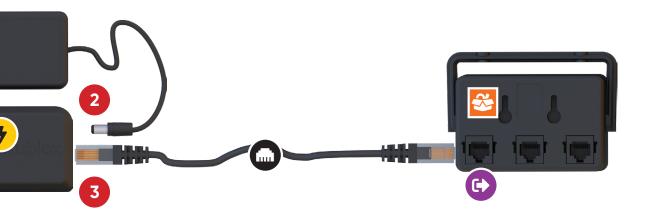

How to initiate your wall configuration

Upon completion of your wall configuration and installation of the Skublox app the wall will perform a power-on-self-test. The sorter Lights will flash in the following color sequence: Red-Green-Blue-Cyan-Magenta-Yellow-Green(shipper). Completion of this process indicates that your wall is configured correctly and ready to use.



Errors

Warnings that indicate you have connected the Lights the wrong way:

 A Sorter Light is flashing green - No Shipper Light is connected. Check the the Shipper Light connection

 A Shipper Light is flashing yellow - unsupported sorter version. The connected Shipper Light must be changed

 A Sorter Light is solid green - There is a problem with the Shipper Light connection









How to shutdown your wall configuration


Follow these steps to disassemble your Skublox configuration:

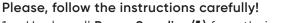

- 1. Unplug all **Power Supplies (5)** from their power sources
- 2. Disconnect the **USB A-B cable (oxineq)** port from the **Controller PC (oxineq)**

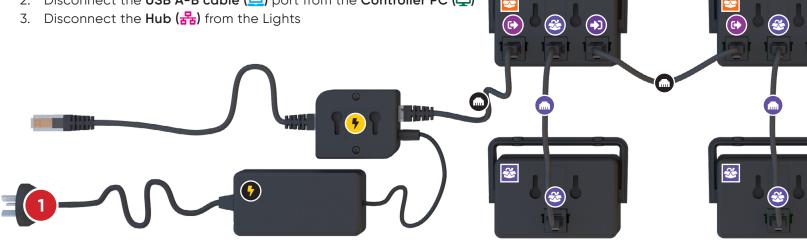

If power to the wall is lost, the state of the lights and the slot contents will be restored when the wall regains power.

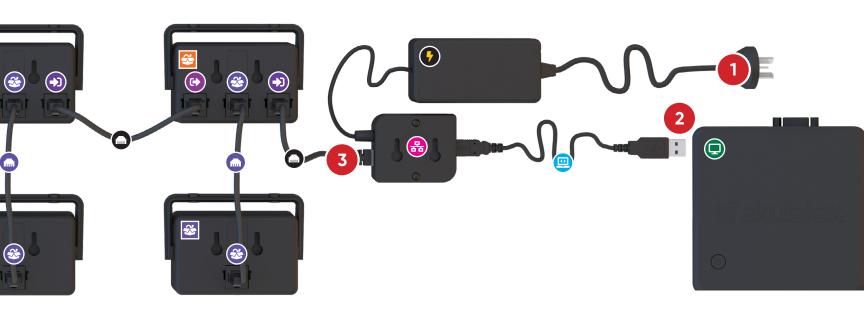

Legend

Sorter Light (♣)

Sorter Light

Shipper Light (♣)

Shipper Light

Connection In(→)

Connection In

Shipper Light Connection(❖)

Shipper Light Connection

Connection Out(♠)

Connection Out

3ft Ethernet Cable (m)

3ft Ethernet cable

2ft Ethernet Cable (m)

2ft Ethernet cable

Power Supply (*)

Power Supply

Repeater (+)

Repeater

Hub (器)

₩ HUB

USB A-B cable (😐)

USB A-B cable

Controller PC ()

Controller PC

Next 20 Lights (Ⅲ)

Next 20 Lights







skublox.com +1 (844) 758-2569 (SKUBLOX) sales@skublox.com

A product by sellercloud